



# Grandstream Networks, Inc.

---

## UCM6200 Basic Configuration Guide



# Table of Contents

<b>OVERVIEW</b> .....	<b>4</b>
<b>SETUP GUIDE SCENARIO</b> .....	<b>4</b>
<b>QUICK INSTALLATION</b> .....	<b>5</b>
Connecting the UCM6200.....	5
Access UCM6200 series Web Interface .....	5
<b>CREATE USER EXTENSION</b> .....	<b>6</b>
Configure Extension Range .....	6
Batch & Single User Creation .....	7
<i>Steps on Adding Single User</i> .....	7
<i>Steps on Adding Batch of Users</i> .....	8
<b>PROVISIONING &amp; ZERO CONFIG</b> .....	<b>10</b>
Auto Discovering.....	11
Extension Assignment.....	11
<b>CONFERENCE BRIDGE</b> .....	<b>13</b>
How to Set up a Conference Bridge .....	13
<b>IVR (INTERACTIVE VOICE RESPONSE)</b> .....	<b>14</b>
Configure IVR .....	14
Create New IVR .....	15
<b>TRUNKS</b> .....	<b>18</b>
Analog Trunks .....	18
<i>Set up Analog Trunk</i> .....	18
VoIP Trunks.....	19
<i>Set up VoIP Trunk</i> .....	20
<b>CALL ROUTES</b> .....	<b>23</b>
Outbound Routes.....	23
<i>How to Configure an Outbound Route</i> .....	23
Inbound Routes.....	24
<i>Set up Inbound Route</i> .....	25



## Table of Figures

Figure 1: Typical UCM6200 Scenario .....	4
Figure 2: Quick Installation Guide for UCM6202 .....	5
Figure 3: Quick Installation Guide – Login Screen .....	5
Figure 4: Create User Extension – Extension Range .....	6
Figure 5: Create User Extension – Extensions .....	7
Figure 6: Create User Extension – Create New User .....	8
Figure 7: Create User Extension – Created Single User .....	8
Figure 8: Create User Extension – Batch Add User .....	9
Figure 9: Create User Extension – Create User Prompt .....	9
Figure 10: Create User Extension – Single and Batch Add Extensions Created .....	10
Figure 11: Provisioning with Zero Config – Auto Discovery .....	11
Figure 12: Provisioning with Zero Config – Extension Assignment .....	12
Figure 13: Provisioning with Zero Config – Manually Assigned Extension .....	12
Figure 14: Provisioning with Zero Config – Extension Status .....	12
Figure 15: Conference Bridge – Create New Conference Room .....	13
Figure 16: Conference Bridge – Create New Conference Room .....	14
Figure 17: Conference Bridge – Conference In Progress.....	14
Figure 18: IVR – Manage IVR.....	15
Figure 19: IVR – Create New IVR.....	16
Figure 20: IVR – Key Pressing Events.....	17
Figure 21: Analog Trunks – Create New Analog Trunk.....	19
Figure 22: VoIP Trunks – Create New Register SIP Trunk .....	21
Figure 23: VoIP Trunks – Edit VoIP Trunk.....	22
Figure 24: Status – Trunks.....	22
Figure 25: Routes – Create Outbound Route .....	24
Figure 26: Routes – Create Inbound Route .....	25



## OVERVIEW

This document will provide instructions on how to set up a UCM6200 series from an out of the box state to a fully functional state. This includes design considerations, creating user extensions, provisioning endpoints with Zero-Config, conferencing, auto attendant configuration, analog/VoIP trunks, routing inbound/outbound calls and voicemail/fax to email setup.

For detailed information in regard to parameters that are encountered in this guide, please check the [UCM6200 series User Manual](#)

## SETUP GUIDE SCENARIO

The image below shows the most typical setup where you have the UCM6200 series WAN port connected to the Internet and the LAN side of the UCM6200 series providing DHCP.

We will use this scenario to setup a Grandstream GXP2135 which will be connected to the LAN side of the UCM6200 series. There can also be a network switch connected to the LAN port of the UCM6200 series so that there may be more than one device connected.


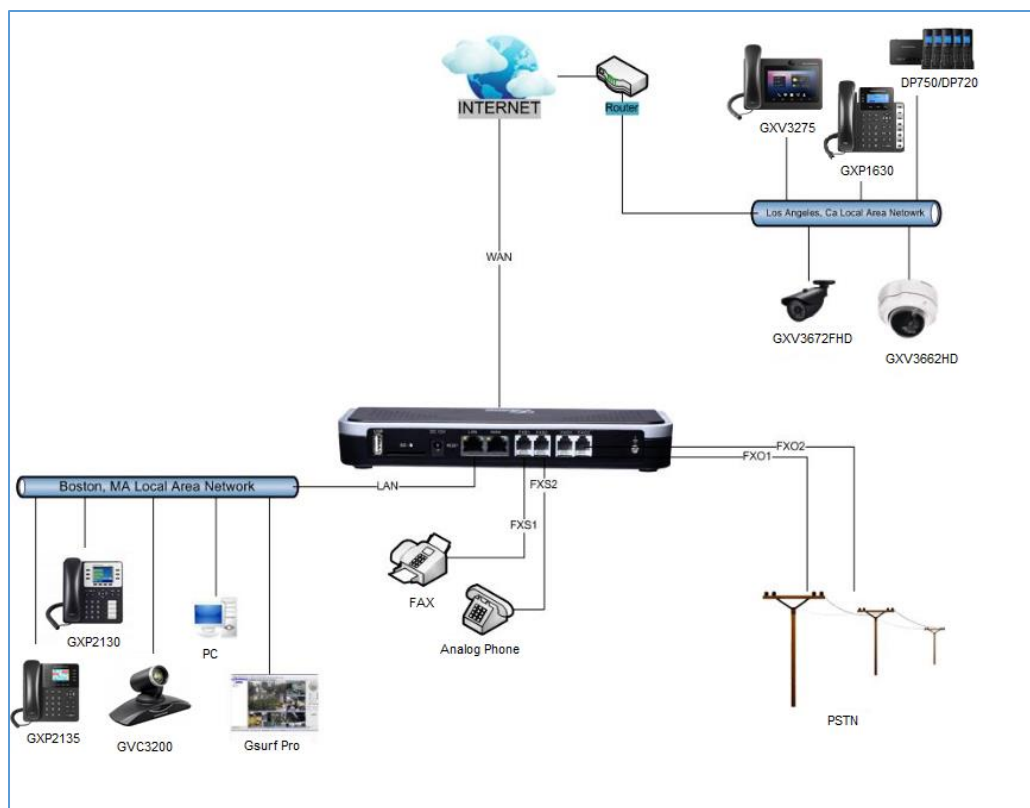


Figure 1: Typical UCM6200 Scenario

# QUICK INSTALLATION

## Connecting the UCM6200

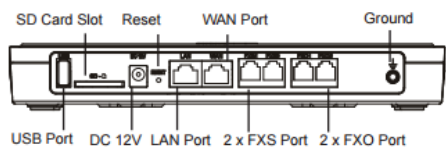

1. Connect the UCM6202 **WAN** port to the uplink port of an Ethernet switch/hub with an RJ45 Ethernet cable.

2. Connect the power adapter.

3. Once the UCM6202 boots up and connects to the network, the LED indicator for WAN port will be in solid green and the LCD shows up the IP address.

4. (Optional) Connect PSTN lines from the wall jack to the FXO ports; connect analog lines (phone and fax) to the FXS ports.

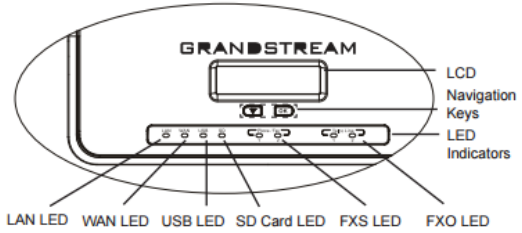


Figure 2: Quick Installation Guide for UCM6202

## Access UCM6200 series Web Interface

Accessing the UCM6200 series web interface allows users to manage users and system settings locally as well as remotely.

The IP address used to access the web UI depends on where the user’s computer is connected. If the computer is connected to the same switch/router that the UCM6200 series WAN port is connected, then browse to the IP address that is displayed on the UCM6200 series LCD. This address is the WAN IP. If the computer is connected to the LAN side of the UCM6200 series, then users would browse to the default IP of the UCM6200 series which is 192.168.2.1. If connected successfully, the UCM6200 series login page will be displayed as shown below.

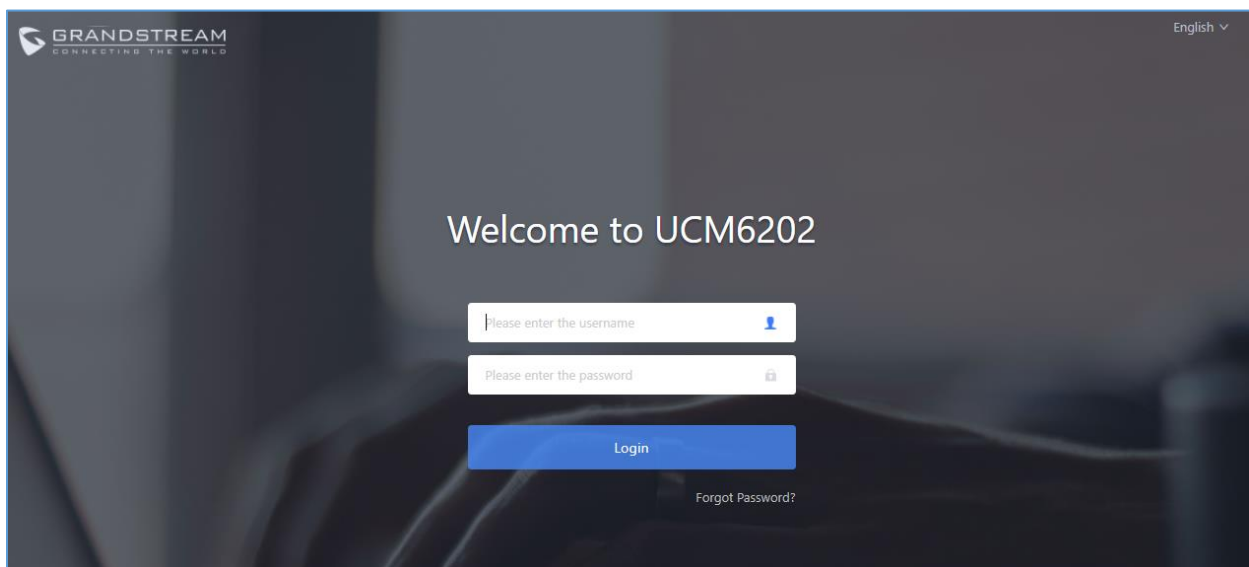


Figure 3: Quick Installation Guide – Login Screen

# CREATE USER EXTENSION

## Configure Extension Range

First part of configuring the UCM6200 series should be about planning for expansion. Here are some questions to think about when setting up extension ranges:

- How many users are in the office?
- Will there be departments within the office?
- Is this office interconnecting with another office?

Once there's a clear picture of how many users will be at each location, how departments are going to be segmented and what's the expected growth of the company, a user can then configure the extension range. Navigate to PBX Settings → General Settings → Extension Preference.

**Extension Preference**

Enforce Strong Password:

Enable Random Password:

Enable Auto Email To User:

Disable Extension Range:

User Extensions:  -

Pick Extensions:  -

Auto Provision Extensions:  -

Conference Extensions:  -

Ring Group Extensions:  -

Queue Extensions:  -

Voicemail Group Extension:  -

IVR Extensions:  -

Dial By Name Extensions:  -

Fax Extension:  -

**Figure 4: Create User Extension – Extension Range**



In the figure above, the user extension range is set with a starting extension of 1000 and ending at 6299. This allows up to 5299 extensions to assign to users. Users can configure any extension range as they desire. Here we've configured it to use four-digit extensions with a leading 1.

Click "Save" at the bottom. Then remember to click on "Apply Changes" at the top so that our extension range will be ready for the next steps.

## Batch & Single User Creation

So now that there are extension ranges configured, we can now begin creating users to prepare for the provisioning process. There are two methods of creating a user. One method would be creating a single user. The other method would be creating a batch of users.

### Steps on Adding Single User

1. Navigate to **Extension / Trunk → Extensions**. For first time setups users will see "No Data".

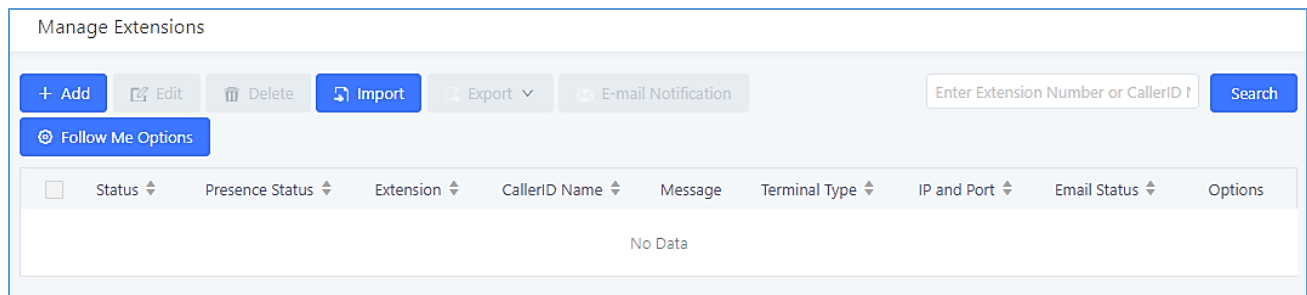


Figure 5: Create User Extension – Extensions

2. Click on "Create New User"
3. Choose Create New SIP Extension.
4. On the "Create New SIP Extension" screen, users can enter in quite a few options, but they are not required for this tutorial. Click "Save" at the bottom of the page.

Create New Extension
Save Cancel

Basic Settings
Media
Features
Specific Time
Follow Me

\* Select Extension Type:

Select Add Method:

**General**

\* Extension:  CallerID Number:

\* Permission:  \* SIP/IAX Password:

AuthID:  Enable Voicemail:

Skip Voicemail Password Verification:  \* Voicemail Password:

\* Keep-alive Frequency:  Send Voicemail to Email:

Enable Keep-alive:

Disable This Extension:

**User Settings**


First Name:  Last Name:

Email Address:  \* User Password:

\* Language:  \* Concurrent Registrations:

Mobile Phone Number:

**Figure 6: Create User Extension – Create New User**


After clicking “Save” the Extensions page will display with the single SIP extension that was just created. Here the user has the ability to edit the extensions by clicking the  at the right.

<input type="checkbox"/>	Status	Presence Status	Extension	CallerID Name	Message	Terminal Type	IP and Port	Email Status	Options
<input type="checkbox"/>	Unavailable	Available	1000	John Doe	Messages: 0/0/0	SIP	--		

Total: 1 < 1 > 30 / page Goto 1


**Figure 7: Create User Extension – Created Single User**

### Steps on Adding Batch of Users

1. Navigate to Extension / Trunk → Extensions.
2. Click on “Add” button .
3. Choose “Batch” under “Basic Settings” → “Select Add Method”.
4. At the “Batch Add SIP Extensions” dialog, the user can specify the “Extension” and the number of extensions to generate by setting the “Create Number”.




In this tutorial we will have a starting extension of 1001 and have the UCM6200 series generate 5 extensions with a password randomly generated. This would create extensions 1001, 1002, 1003, 1004 and 1005.

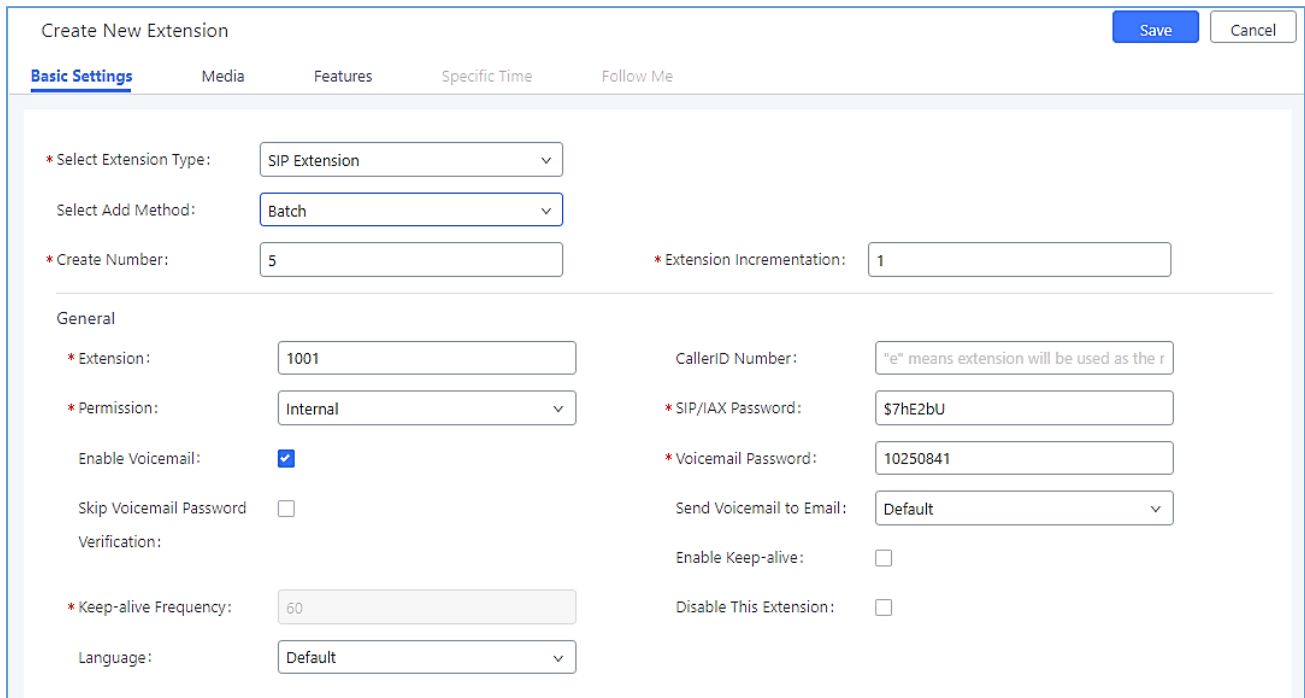

**Figure 8: Create User Extension – Batch Add User**

5. Click “Save” button to have the UCM6200 series generate the extensions.
6. Next, a prompt will appear asking “Are you sure you want to create users: 1001, 1002, 1003, 1004 1005”. Click “OK”.

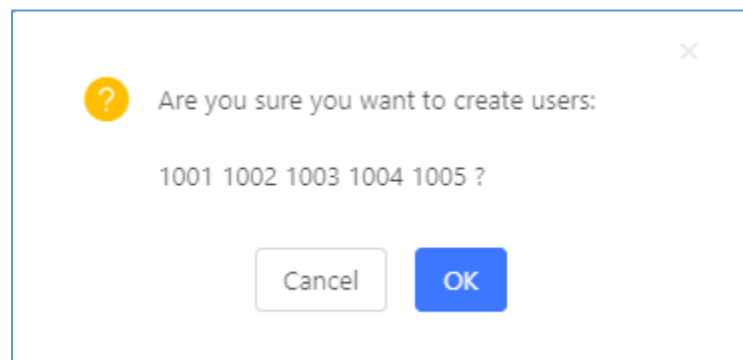

**Figure 9: Create User Extension – Create User Prompt**

At this point the Extensions page should look similar to this:

Manage Extensions

<input type="checkbox"/>	Status	Presence Status	Extension	CallerID Name	Message	Terminal Type	IP and Port	Email Status	Options
<input type="checkbox"/>	Idle	Available	1000	John Doe	Messages: 0/0/0	SIP	192.168.5.164:5060		
<input type="checkbox"/>	Unavailable	Available	1001		Messages: 0/0/0	SIP	--		
<input type="checkbox"/>	Unavailable	Available	1002		Messages: 0/0/0	SIP	--		
<input type="checkbox"/>	Unavailable	Available	1003		Messages: 0/0/0	SIP	--		
<input type="checkbox"/>	Unavailable	Available	1004		Messages: 0/0/0	SIP	--		
<input type="checkbox"/>	Unavailable	Available	1005		Messages: 0/0/0	SIP	--		

Total: 6

**Figure 10: Create User Extension – Single and Batch Add Extensions Created**

For more details on Extension parameters please see the [UCM6200 series User Manual](#).

## PROVISIONING & ZERO CONFIG

Grandstream SIP Devices can be configured via Web interface as well as via configuration file through TFTP/HTTP/HTTPS download. All Grandstream SIP devices support an XML format configuration file. The UCM6200 provides a Plug and Play mechanism to auto-provision the Grandstream SIP devices in a zero configuration manner by generating XML config file and having the phone to download it. This allows users to finish the installation with ease and start using the SIP devices in a managed way.

To provision a phone, three steps are involved, i.e., discovery, assignment and provisioning. The UCM6200 creates XML config file to the detected/assigned Grandstream device and accomplishes the following configurations on the device after the provisioning:

- A UCM6200 extension will be assigned and registered on the phone.
- SIP-related network settings such as "NAT traversal" and "Use Random Port" are configured on the phone.
- Call settings such as "Dial Plan" and "Auto Answer".
- LDAP client configurations will be set up automatically on the phone to use the default LDAP directory generated in the UCM6200 LDAP server.


This section explains how zero config works on the UCM6200. The settings for this feature can be accessed via Web GUI → Value-added Features → Zero Config.



## Auto Discovering

When referring back to our typical scenario in the beginning of this tutorial, we know that there is a GXP2135 connected to the LAN side of the UCM6200 series. The UCM6200 series LAN interface has DHCP enabled and has assigned the GXP2135 with an IP address. By default, the IP assigned would be within the 192.168.2.X range. When the UCM6200 series offers an IP address to the phone it also offers DHCP Option 66, which provides the phone with a config server path that points to the UCM6200 series. All of Grandstream VoIP devices have Option 66 turned on by default and this is how the GXP2135 was discovered by the UCM6200.

Upon being discovered, the GXP2135 will provide details about its MAC, IP Address, Version(Firmware), Vendor, Model, Connection Status and Create Config. By navigating to **Value-added Features →Zero Config**, a user will be able to see the discovered device(s).

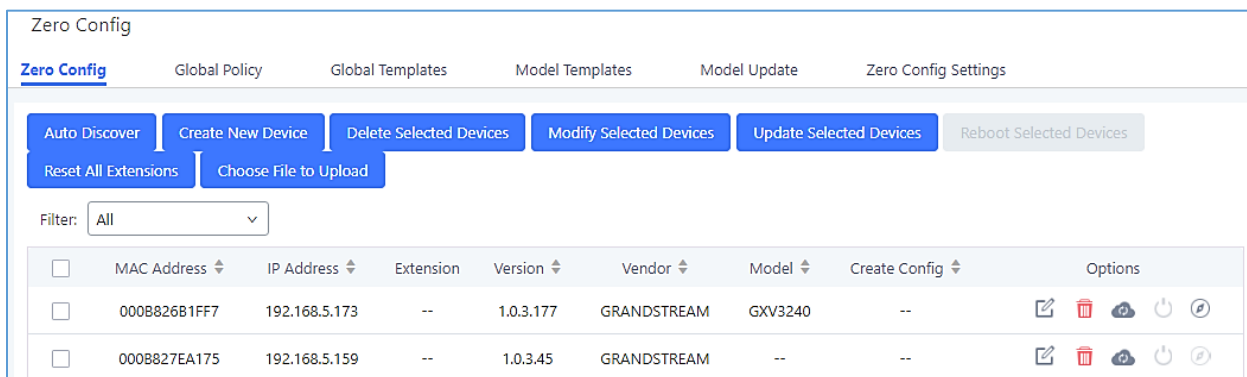

The screenshot shows the 'Zero Config' interface with a navigation bar containing 'Zero Config', 'Global Policy', 'Global Templates', 'Model Templates', 'Model Update', and 'Zero Config Settings'. Below the navigation bar are several action buttons: 'Auto Discover', 'Create New Device', 'Delete Selected Devices', 'Modify Selected Devices', 'Update Selected Devices', 'Reboot Selected Devices', 'Reset All Extensions', and 'Choose File to Upload'. A filter dropdown is set to 'All'. The main content area displays a table of discovered devices:












<input type="checkbox"/>	MAC Address ↕	IP Address ↕	Extension	Version ↕	Vendor ↕	Model ↕	Create Config ↕	Options
<input type="checkbox"/>	000B826B1FF7	192.168.5.173	--	1.0.3.177	GRANDSTREAM	GXV3240	--	    
<input type="checkbox"/>	000B827EA175	192.168.5.159	--	1.0.3.45	GRANDSTREAM	--	--	    


Figure 11: Provisioning with Zero Config – Auto Discovery

## Extension Assignment

In the Auto Provision settings, users have the option to enable “Automatically Assign Extension”. If enabled, an extension will be created and assigned to the new device detected. This is a great feature if specific extension assignment isn’t required, but for our setup we’ll work on manually assigning an extension to a discovered device.

Navigate to **Value-added Features →Zero Config** and click on the  for the discovered device. The next screen provides details of the device and also allows a user to assign an extension. Since our GXP2135 is a 4-line phone, the UCM6200 series gives us the option to assign 4 extensions to the phone.

Edit Device: 000B826B1FF7 Save Cancel



\* Model: GRANDSTREAM GXV3240

\* MAC Address: 000B826B1FF7

IP Address: 192.168.5.173

Version: 1.0.3.184

---

Basic | Advanced

Accounts

<input checked="" type="checkbox"/> Account 1:	1000
<input type="checkbox"/> Account 2:	1000
<input type="checkbox"/> Account 3:	1000
<input type="checkbox"/> Account 4:	1000
<input type="checkbox"/> Account 5:	1000
<input type="checkbox"/> Account 6:	1000

Programmable MPK Settings

<input type="checkbox"/> MPK 1:	Speed Dial	Description	Value
<input type="checkbox"/> MPK 2:	Speed Dial	Description	Value

**Figure 12: Provisioning with Zero Config – Extension Assignment**

Check Account 1 and select the desired extension, then click “Save”. Now the Zero Config page displays the device with an extension assigned to it on Account 1.

<input type="checkbox"/>	MAC Address	IP Address	Extension	Version	Vendor	Model	Create Config	Options
<input type="checkbox"/>	000B826B1FF7	192.168.5.173	1000	1.0.3.184	GRANDSTREAM	GXV3240	--	

**Figure 13: Provisioning with Zero Config – Manually Assigned Extension**

After assigning an extension, the phone may be rebooted in order to pick up the configuration file from the UCM6200 series. During this process, the phone will boot up, request for config file, download the config file, then reboot once more in order to apply the changes.

After the phone is completely booted, navigate to **Extension / Trunk → Extensions** page to see the extension status. The SIP status will show a green circle for a successful registration.

<input type="checkbox"/>	Status	Presence Status	Extension	CallerID Name	Message	Terminal Type	IP and Port	Email Status	Options
<input type="checkbox"/>	<span style="color: green;">●</span> Idle	Available	1000	John Doe	Messages: 0/0/0	SIP	192.168.5.164:5060		

**Figure 14: Provisioning with Zero Config – Extension Status**



## CONFERENCE BRIDGE


The UCM6200 supports conference bridge allowing multiple bridges used at the same time:

- UCM6202/6204 supports up to 3 conference bridges allowing up to 25 simultaneous PSTN or IP participants.
- UCM6208 supports up to 6 conference bridges allowing up to 32 simultaneous PSTN or IP participants.

The conference bridge configurations can be accessed under **Web GUI → Call Features → Conference**. In this page, users could create, edit, view, invite, manage the participants and delete conference bridges. The conference bridge status and conference call recordings (if recording is enabled) will be displayed in this web page as well.

### How to Set up a Conference Bridge

1. Click on “Create New Conference Room”.
2. At the “Create New Conference Room” screen, the Extension is automatically populated since the extension range is in effect. Users can assign another number that is within the Conference Extension range.
3. Next, uncheck the option “Public Mode”. This will make the password options available. Enter a numeric password for an admin as well as the regular user password. In this example, the user enters 511511 as the user password and 510510 as the admin password.

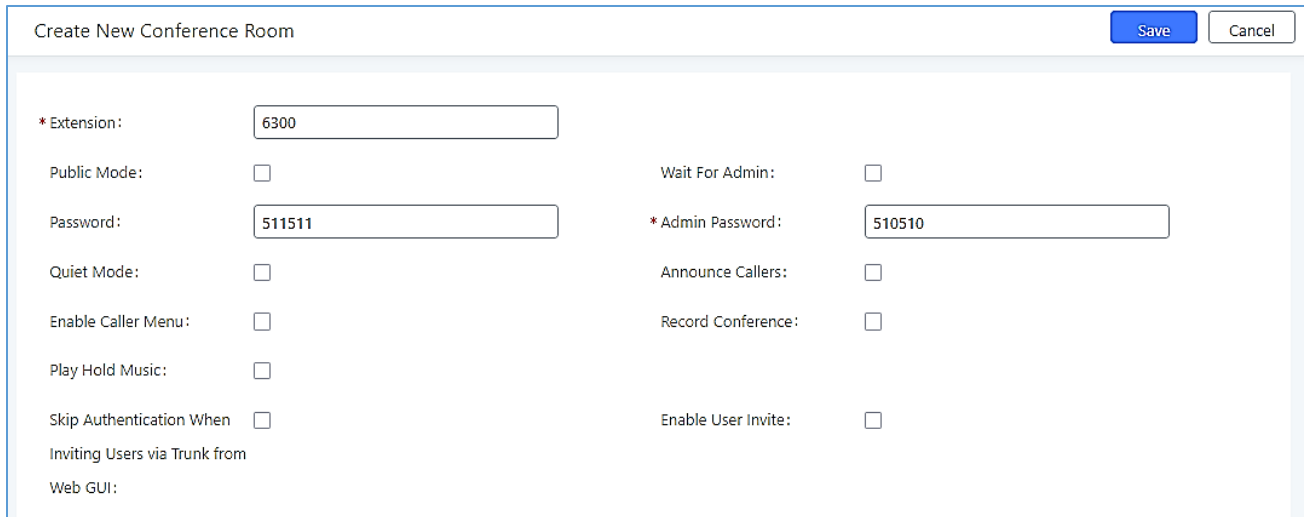

Create New Conference Room

Save Cancel

\* Extension: 6300

Public Mode:

Wait For Admin:

Password: 511511

\* Admin Password: 510510

Quiet Mode:

Announce Callers:

Enable Caller Menu:

Record Conference:

Play Hold Music:

Skip Authentication When Inviting Users via Trunk from Web GUI:

Enable User Invite:

Figure 15: Conference Bridge – Create New Conference Room

4. Click “Save” at the bottom then “Apply Changes” at the top.

We should now have a conference room created and the status page will display the following:



Room	Attendee	Administrator	Start Time	Activity	Options
+ 6300	0	0	--	--	

**Figure 16: Conference Bridge – Create New Conference Room**

With the phone that was registered to the UCM6200 series, dial the conference room extension. For this example, we will dial 6300. The user will hear a prompt for the conference password. Depending on the user, the regular password or admin password can be entered.

During a conference call, the admin can log in to the UCM6200 series and view the conference room status. This provides the admin with details on which conference room is active, who the participants are and the conference call's current duration.

Besides status information, the admin has several conference management tools. By clicking the button, the admin can invite other users to the conference. Clicking will kick the selected user from the conference. When clicking or button the admin will mute/unmute the specific user.

Room	Attendee	Administrator	Start Time	Activity	Options												
- 6300	1	0	2017-11-22 10:50:48	00:00:18													
<table border="1"> <thead> <tr> <th>User</th> <th>Caller ID</th> <th>Caller Name</th> <th>Channel Name</th> <th>Activity</th> <th>Options</th> </tr> </thead> <tbody> <tr> <td>1 Attendee</td> <td>1001</td> <td></td> <td>PJSIP/1001-00000005</td> <td>00:00:18</td> <td> </td> </tr> </tbody> </table>						User	Caller ID	Caller Name	Channel Name	Activity	Options	1 Attendee	1001		PJSIP/1001-00000005	00:00:18	
User	Caller ID	Caller Name	Channel Name	Activity	Options												
1 Attendee	1001		PJSIP/1001-00000005	00:00:18													

**Figure 17: Conference Bridge – Conference In Progress**

For more options and features for the conference room, please see the [UCM6200 series User Manual](#).









## IVR (INTERACTIVE VOICE RESPONSE)

### Configure IVR

IVR configuration can be accessed under the UCM6200 Web GUI → Call Features → IVR. Users could create, edit, view and delete an IVR.

- Click on "Create New IVR" to add a new IVR.
- Click on to edit the IVR configuration.
- Click on to delete the IVR.



+ Create New IVR					
Extension ↕	Name ↕	Dial Other Extensions ↕	Dial Trunk ↕	Response Timeout ↕	Options
7000	OfficeOpen	Yes	No	10	 
7001	OfficeClosed	Yes	No	10	 
7002	Sales	Yes	No	10	 
7003	Support	Yes	No	10	 

Total: 4 < 1 > 10 / page v Goto

**Figure 18: IVR – Manage IVR**

## Create New IVR

1. Click on “Create New IVR”.
2. Enter a Name for the IVR. This is used for referencing purposes. In this example the user will create “OfficeHours2”.
3. “Extension” is populated automatically by the extension range that was created in the beginning of the tutorial. A user may choose another IVR extension within the range if desired.
4. Enable “Dial Other Extensions” to allow callers who reach the IVR to dial a direct internal extension without having to go through voice prompts.
5. “Welcome Prompt” is the recording that will be played when a caller reaches the IVR. Users can click on the “Prompt” link next to the dropdown box to configure a welcome prompt.



### Create New IVR

**Basic Settings**
Key Pressing Events

---

\* Name:

\* Extension:

Dial Trunk:

Dial Other Extensions:

Extension
  Conference

Call Queue
  Ring Group

Paging/Intercom Groups
  Voicemail Groups

Fax Extension
  Dial By Name

All

\* IVR Black/Whitelist:

Replace Display Name:

Alert-info:

Prompt:

Prompt

\* Digit Timeout:

\* Response Timeout:

Response Timeout Prompt:

Prompt

Invalid Prompt:

Prompt

\* Response Timeout Repeat

Loops:

**Figure 19: IVR – Create New IVR**

6. The next section on configuring an IVR would be the Key Pressing Events. Users can direct calls based on a caller selection. For example, a caller reaches the IVR and the Welcome Prompt plays, “Thank you for calling Grandstream Networks. For support, please dial 0. For Sales, please dial 1.”

Click on the drop down box for the first event, which is “Press 0” and select Extension. Another drop down box will appear and the user can then select an extension from the list. For this example, the user selects Extension 1000.





- For Key Pressing Event “Press 1” click on the drop down box and select Extension. User selects Extension 1001. Besides from Extension as a Key Pressing Event, the user can select Voicemail, Conference Room, Voicemail Group, IVR, Ring Group and many more.

Create New IVR

Basic Settings     **Key Pressing Events**

Press 0:	<input type="text" value="Extension"/>	<input type="text" value="1000 'John Doe'"/>
Press 1:	<input type="text" value="Extension"/>	<input type="text" value="1001"/>
Press 2:	<input type="text" value="Select an Option"/>	
Press 3:	<input type="text" value="Select an Option"/>	
Press 4:	<input type="text" value="Select an Option"/>	
Press 5:	<input type="text" value="Select an Option"/>	
Press 6:	<input type="text" value="Select an Option"/>	
Press 7:	<input type="text" value="Select an Option"/>	
Press 8:	<input type="text" value="Select an Option"/>	
Press 9:	<input type="text" value="Select an Option"/>	
Press *:	<input type="text" value="Select an Option"/>	
Timeout:	<input type="text" value="Custom Prompt"/>	<input type="text" value="goodbye"/>
Invalid:	<input type="text" value="Custom Prompt"/>	<input type="text" value="goodbye"/>

**Figure 20: IVR – Key Pressing Events**



- Click “Save” button and then click on “Apply Changes” at the top.

To find out more options and parameter descriptions in regard to the IVR, please refer to the [UCM6200 series User Manual](#).

## TRUNKS

### Analog Trunks

Go to **Web GUI → Extension / Trunk → Analog Trunks** to add and edit analog trunks.

- Click on "Create New Analog Trunk" to add a new analog trunk.
- Click on  to edit the analog trunk.
- Click on  to delete the analog trunk.

The UCM6200 series has built in FXO ports which allows it to pull in PSTN lines and provide analog trunk service. For this example, we will configure an analog line that is connected to FXO1.

### Set up Analog Trunk

1. Click on "Create New Analog Trunk".
2. For "FXO Port" select 1.
3. Trunk Name is set to "Analog1".
4. "Caller ID Scheme" is set for "Bellcore/Telcordia". Depending on the provider, users can select other schemes.
5. "Tone Country" is set to "United States of America (USA)" since this tutorial is set up in the North American region. Users can click the dropdown box to select an option more suited for their region.
6. Click "Save" and then click on "Apply Changes" at the top.



Edit Analog Trunk: Analog1
Save Cancel

\* FXO Port:  1  2

\* Trunk Name:

**Advanced Options**

SLA Mode:

Enable Polarity Reversal:

Current Disconnect Threshold (ms):

\* Ring Timeout:

\* RX Gain:

\* TX Gain:

Use CallerID:

Fax Mode:

Caller ID Scheme:

\* FXO Dial Delay (ms):

Auto Record:

Disable This Trunk:

DAHDI Out Line Selection:

\* The Maximum Number of Call Lines:

Echo Cancellation Mode:

**Tone Settings**

Busy Detection:

\* Busy Tone Count:

Congestion Detection:

\* Congestion Count:

\* Tone Country:

\* Busy Tone:

\* Congestion Tone Settings:





PSTN Detection:

**Figure 21: Analog Trunks – Create New Analog Trunk**

**Note:** If there are reports of calls being dropped and lines are not disconnecting properly, this could mean that there are line settings mismatched. The UCM6200 series offers an auto detect feature that tests the line and provides the best possible settings. This option is called “PSTN Detection” which can be found under the Analog trunk configuration page.

## VoIP Trunks

VoIP trunks can be configured under **Web GUI → Extension / Trunk ->VoIP Trunks**. Once created, the VoIP trunks will be listed with Provider Name, Type, Hostname/IP, Username and Options to edit/detect the trunk.

- Click on "Create New SIP Trunk" or “Create New IAX Trunk” to add a new VoIP trunk.
- Click on  to configure detailed parameters for the VoIP trunk.
- Click on  to configure Direct Outward Dialing (DOD) for the VoIP Trunk.
- Click on  to start LDAP Sync.
- Click on  to delete the VoIP trunk.



There are 4 different type of VoIP trunks that can be configured. The types are Peered/Registered SIP trunk or Peered/Registered IAX trunk. This tutorial will demonstrate how to configure a SIP Registered Trunk.

### **Set up VoIP Trunk**


1. Click on “Create New SIP Trunk”.
2. Click the dropdown box for Type and select “Register SIP Trunk”.
3. Enter a name for “Provider Name” e.g., GSTrunk.
4. Configure the IP address or URL of the VoIP providers server as the “Host Name” e.g., sip.grandstream.com.
5. Input the username to authenticate with the VoIP provider as the “Username” e.g, 6266389172.
6. Enter password for username to authenticate with VoIP provider server.
7. Enter the AuthID. This is the SIP service subscriber’s ID used for authentication. If not configured, the CallerID will be used for authentication.
8. Enter an outbound proxy if the provider requires one.
9. Click “Save” and then “Apply Changes” at the top



### Create New SIP Trunk

Type:	<input type="text" value="Register SIP Trunk"/>
* Provider Name:	<input type="text" value="GSTrunk"/>
* Host Name:	<input type="text" value="sip.grandstream.com"/>
Keep Original CID:	<input type="checkbox"/>
Keep Trunk CID:	<input checked="" type="checkbox"/>
NAT:	<input type="checkbox"/>
Disable This Trunk:	<input type="checkbox"/>
TEL URI:	<input type="text" value="Disabled"/>
Need Registration:	<input checked="" type="checkbox"/>
Allow outgoing calls if registration fails:	<input checked="" type="checkbox"/>
CallerID Name:	<input type="text"/>
* Username:	<input type="text" value="6266389172"/>
* Password:	<input type="text" value="....."/>
AuthID:	<input type="text" value="6266389172"/>
AuthTrunk:	<input type="checkbox"/>
Auto Record:	<input type="checkbox"/>

**Figure 22: VoIP Trunks – Create New Register SIP Trunk**

After creating the SIP trunk, users can click the  on the right of the VoIP trunk for more configuration options.

Edit SIP Trunk: GSTrunk

Basic Settings      **Advanced Settings**

---

Codec Preference:

9 items Available	6 items Selected
<input type="checkbox"/> G.722	<input type="checkbox"/> PCMU
<input type="checkbox"/> AAL2-G.726-32	<input type="checkbox"/> PCMA
<input type="checkbox"/> ADPCM	<input type="checkbox"/> GSM
<input type="checkbox"/> G.723	<input type="checkbox"/> G.726
<input type="checkbox"/> H.263	<input type="checkbox"/> G.729

Send PPI Header:

Send PAI Header:

Outbound Proxy Support:

DID Mode: Request-line

DTMF Mode: Default

Enable Heartbeat Detection:

\*The Maximum Number of Call Lines: 0

Fax Mode: None


SRTP: Disabled

**CC Settings**

Enable CC:

**Figure 23: VoIP Trunks – Edit VoIP Trunk**

To verify if the SIP trunk is registered, the user may navigate to **Web UI → System Status → Dashboard**.

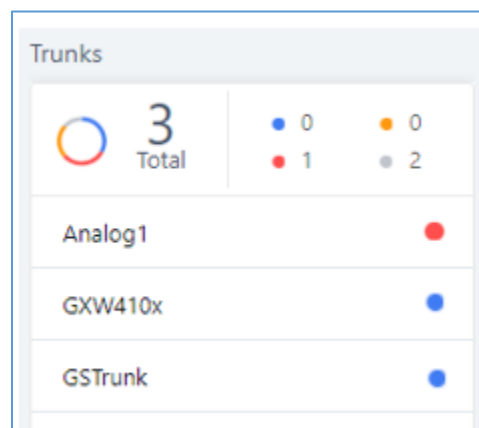




**Figure 24: Status – Trunks**

# CALL ROUTES

## Outbound Routes

In the UCM6200, an outgoing calling rule pairs an extension pattern with a trunk used to dial the pattern. This allows different patterns to be dialed through different trunks (e.g., "Local" 7-digit dials through a FXO while "Long distance" 10-digit dials through a low-cost SIP trunk). Users can also set up a failover trunk to be used when the primary trunk fails.

Go to **Web GUI → Extension / Trunk → Outbound Routes** to add and edit outbound rules.

- Click on "Create New Outbound Rule" to add a new outbound route.
- Click on  to edit the outbound route.
- Click on  to delete the outbound route.
- Click on  to move the outbound route up/down to arrange the priority of the outbound rule. The outbound rule listed on the top has higher priority. When the dialing pattern matches two or more outbound rules (for example, the same pattern is configured for 2 different trunks; or dialing out 1000 matches pattern 1xxx for trunk 1 and pattern 100x for trunk 2), the one listed on the top will be used.

## How to Configure an Outbound Route

1. Click "Create New Outbound Rule".
2. Configure the name of the Calling Rule. For example, 'Local', 'LongDistance' and etc.
3. Create a dial Pattern. For 7 digit dialing (Local) the pattern will look like this: XXXXXXX. This means that any 7 digits will use this route. For 10 digit dialing the pattern would look like this: NXXNXXXXXX. If an '1' is required before dialing out, the dial pattern can be configured in this manner: 1NXXNXXXXXX.

In this example, the dial pattern is going to be created for local 7 digit dialing so the pattern is XXXXXXX

4. Next, set a "Privilege Level". There are 4 Privilege Levels; Internal, Local, National, International. Internal is the lowest level of security whereas international is the highest level of security.

The way that Privilege Levels are used could be thought of as door locks. Extensions are granted with "Permissions" that can be seen as keys. If an Extension is configured with an Internal permission, it CANNOT access an outbound route with a Privilege level of Local, National and International. A user configured with National permission can access routes that have a Privilege Level of Internal, Local, National, but not International.

5. The pattern that was configured is a 7-digit dialing pattern. For "Use Trunk" select the Analog Trunk or select the desired trunk for this particular dial pattern. For long distance calls, it may be cost effective to route the calls to SIP trunk versus going through a local PSTN line.



6. Click “Save” and then click on “Apply Changes” at the top.

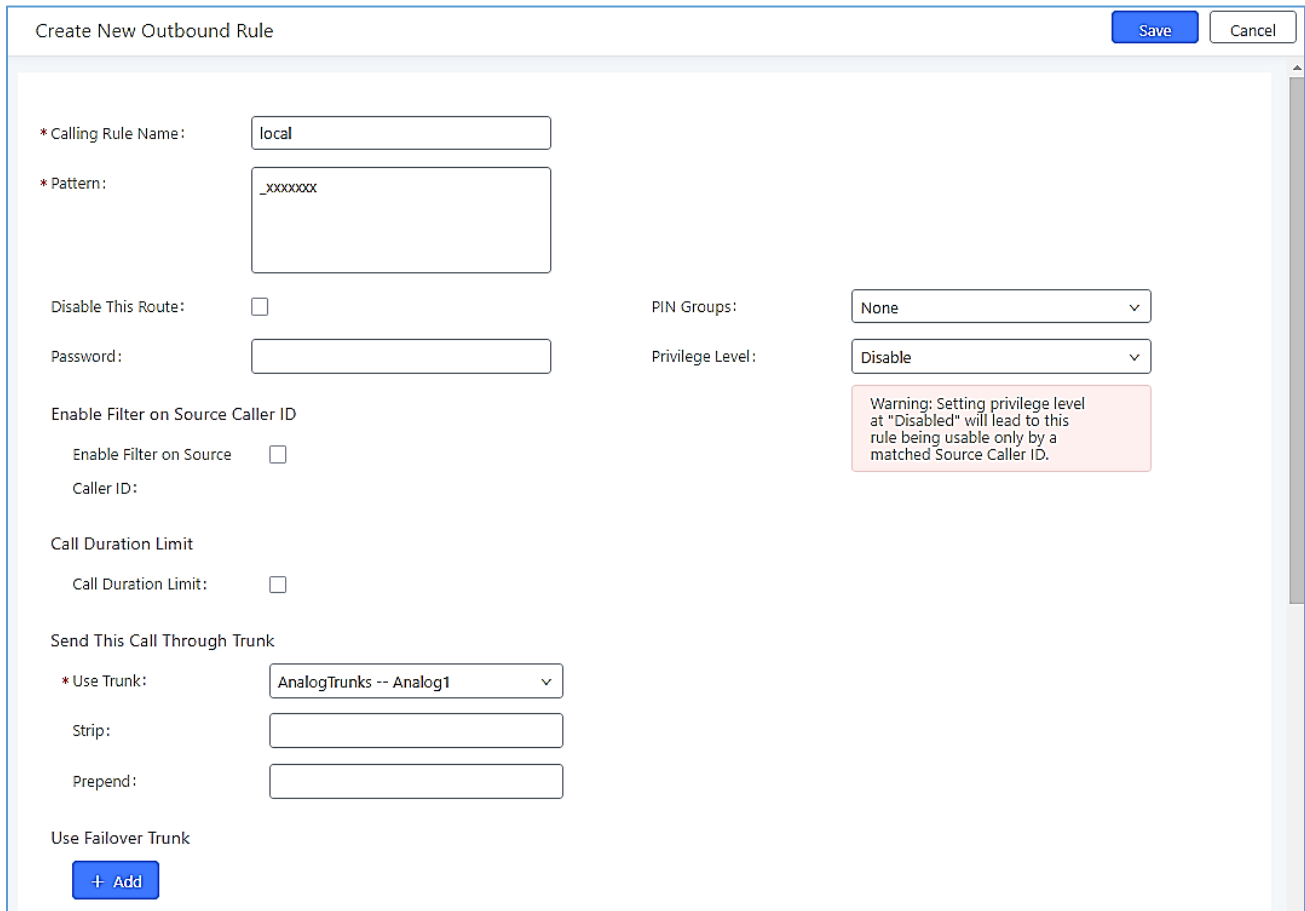




Figure 25: Routes – Create Outbound Route

## Inbound Routes

In the UCM6200, an incoming calling rule allows for various inbound destinations. Users can route inbound calls by DID, to Extension, Voicemail, Conference Room, Queue, Ring Group, Page, Voicemail Group, FAX, DISA or IVR. These inbound routes can also be triggered based on a time condition as well.

Inbound routes can be configured via **Web GUI → Extension / Trunk → Inbound Routes**.


- Click on "Create New Inbound Rule" to add a new inbound route.
- Click on "DID Features" to configure DID features for the inbound route.
- Click on "Blacklist" to configure blacklist for all inbound routes.
- Click on  to edit the inbound route.
- Click on  to delete the inbound route.

This section of the tutorial will provide instructions on how to setup an inbound route for a Registered SIP Trunk. Inbound calls into this SIP trunk will have a default destination as well as a time conditioned destination.



## Set up Inbound Route

1. Click on “Create New Inbound Rule”.
2. For “Trunks” select the SIP trunk that has been configured. (e.g. GSTrunk).
3. The DID pattern can be composed of two parts, divided by a ‘/’ character. The first part is used to specify the dialed number and the second part is used to specify the caller ID, which is optional. If caller ID section is entered it means only the extension with the specific caller ID is allowed to call into this trunk.
4. Click the dropdown box for “Default Destination” and select IVR. Then select the IVR extension.
5. Next, click on “Click to add Time Condition”.
6. Enter a “Start Time” of 8am, “End Time” of 18pm.
7. Next select By Week for “Date” and select Monday-Friday.
8. For “Destination” select Extension and choose an extension number.

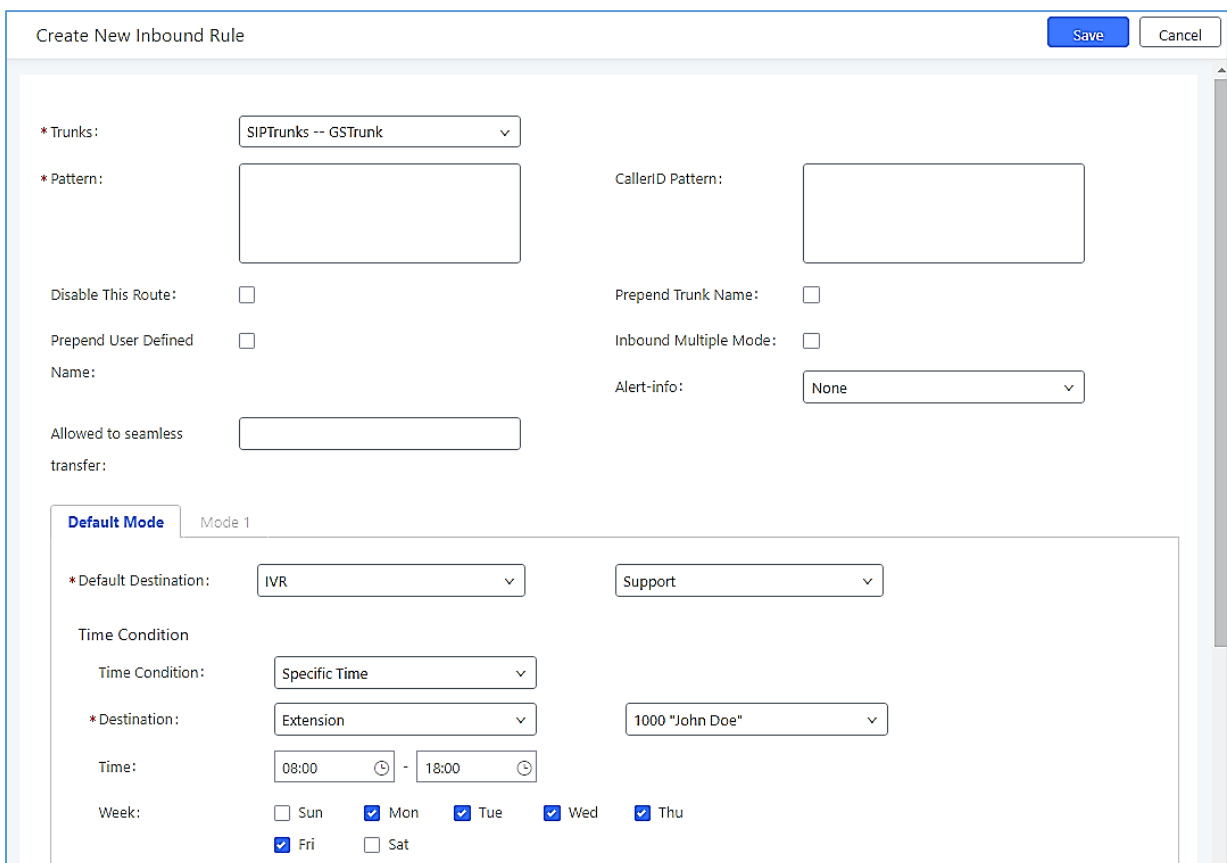

The screenshot shows the 'Create New Inbound Rule' configuration window. The window has a title bar with 'Create New Inbound Rule' and 'Save' and 'Cancel' buttons. The main content area is divided into several sections:

- \*Trunks:** A dropdown menu showing 'SIPTrunks -- GSTrunk'.
- \*Pattern:** An empty text input field.
- CallerID Pattern:** An empty text input field.
- Disable This Route:** An unchecked checkbox.
- Prepend Trunk Name:** An unchecked checkbox.
- Prepend User Defined:** An unchecked checkbox.
- Name:** An empty text input field.
- Inbound Multiple Mode:** An unchecked checkbox.
- Alert-info:** A dropdown menu showing 'None'.
- Allowed to seamless transfer:** An empty text input field.
- Default Mode:** A tabbed interface with 'Mode 1' selected.
  - \*Default Destination:** Two dropdown menus showing 'IVR' and 'Support'.
  - Time Condition:** A dropdown menu showing 'Specific Time'.
  - \*Destination:** Two dropdown menus showing 'Extension' and '1000 "John Doe"'.
    - Time:** Two time pickers showing '08:00' and '18:00'.
    - Week:** A set of checkboxes for days of the week: Sun (unchecked), Mon (checked), Tue (checked), Wed (checked), Thu (checked), Fri (checked), Sat (unchecked).

**Figure 26: Routes – Create Inbound Route**

When a call is received on this SIP trunk during the hours of 8:30am to 11:30pm it will be routed to extension 1000. All calls outside of this condition will be routed to the IVR extension Support.